

PTV Fleet/Truck Navigator 7 Installation Tutorial:

After the installation there automatically is created a desktop start icon:



First you have to choose program language:

Select Language	
English	⏶
Español	⏶
Français	⏶
Italiano	⏶
Język polski	⏶
Magyar	⏶
Nederlands	⏶
Norsk	⏶
Cancel	OK



Vehicle profile

<input checked="" type="checkbox"/> Car	⏶	+
<input checked="" type="checkbox"/> Truck 7.5t		
<input checked="" type="checkbox"/> Truck 40t	⏴	✍
<input checked="" type="checkbox"/> Truck 16t		
<input checked="" type="checkbox"/> Truck 12t	⏵	✕
	⏷	
Cancel		OK

Enter your licence Key:

Bitte geben Sie die Seriennummer ein

PTV Navigator 7

<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>	<input type="text"/>
A	B	C	D	E	F	G	H
I	J	K	L	M	N	O	P
Q	R	S	T	U	V	W	X
Y	Z			ABC	123	ÄÁÀ	<
unregistriert starten						Registrieren	

Now you must enter a pin code, how do you get this please read below.

Bitte geben Sie den PinCode ein

Serial No.: **F-** XXXXXXXXXX
Reference No.: **F5-FA-64-AA**
Pincode

Bitte lassen Sie sich jetzt einen PIN-Code generieren. Wie das genau geht, entnehmen Sie bitte der Programmdokumentation.

Tragen Sie dann den PIN-Code oben in das entsprechende Feld ein und tippen auf 'OK'.

1 **2** **3** **4** **5** **6**
7 **8** **9** **0**


Abbrechen

Ok

Now visit this Website:

<http://www.ptvag.com/software/navigation/pin-code/>

There you enter your licence key, the reference number, your company name (if applicable) and country, postal code and city:

PTV AG GLOBAL	Software Consulting Research Company
	Software < Navigation < PIN Code
 traffic mobility logistics.	<h2>PIN Code for PTV Navigation Products</h2> <h3>PIN code - your "key" to installation</h3> <p>You will require a PIN code in order to perform a complete installation of your product. The PIN will be calculated using</p> <ul style="list-style-type: none">▶ the program serial number, which you will find in your licence▶ and a reference number that you receive when you install the software. <p>Please enter both numbers and your company name in the form below. The PIN code will then be calculated automatically. Use this PIN code to conclude the installation.</p> <p>The PIN code generation on this page is for the products Fleet Navigator and Truck Navigator Pocket PC and Car PC / Notebook Edition.</p> <p>Enter your program serial number here <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/></p> <p>Enter your reference number here <input type="text"/> - <input type="text"/> - <input type="text"/> - <input type="text"/></p> <p>Enter the name of your company here <input type="text"/></p> <p>Country, postcode and town <input type="text"/> Great Britain <input type="text"/> <input type="text"/></p> <p><input type="button" value="Calculate PIN Code."/></p>
Software	
Transportation planning / Traffic engineering	
Traffic management / ITS	
Transport route planning	
Tour Planning and Optimisation	
Geomangement & Sales Force Management	
Developer Components	
▼ Navigation	
PTV TruckNavigator	
PTV FleetNavigator	
PTV Navigation SDK	
▶PIN Code	

Now click on "Calculate PIN Code":

Now write down or print the given PIN number:

	Software Consulting Forschung Unternehmen
PTV AG DEUTSCHLAND	Software « Navigation
	<h2>PIN-Code-Generierung für PTV Navigationsprodukte</h2> <h3>PIN-Code - der Schlüssel für Ihre Installation</h3> <p>Bei der Installation Ihrer Navigationssoftware werden Sie zur Eingabe einer PIN-Nummer aufgefordert. Diese PIN-Nummer können Sie hier ermitteln. Sie benötigen dafür</p> <ul style="list-style-type: none">▶ die Programmseriennummer, die Sie mit dem Lizenzbrief erhalten haben,▶ eine Referenznummer, die Sie während der Installation Ihrer Software genannt bekommen. <p>Bitte geben Sie diese beiden Nummern und Ihren Firmennamen in das untenstehende Formular ein. Der PIN-Code wird dann automatisch errechnet. Mit der so ermittelten PIN-Nummer können Sie die Installation Ihres Produktes abschließen.</p> <p>Die PIN-Code Generierung auf dieser Seite gilt für die Produkte PTV FleetNavigator und PTV TruckNavigator Pocket PC bzw. Car PC / Notebook Edition.</p> <p>Ermitteln Sie hier Ihren PIN-Code</p> <p>Ihr PIN-Code lautet: 89846605</p>
Software	
Verkehrsplanung / Verkehrstechnik	
Verkehrsmanagement / ITS	
Transportroutenplanung	
Tourenplanung und -optimierung	
Geomanagement & Außendienst	
Developer Components	
▼ Navigation	
PTV TruckNavigator	
PTV FleetNavigator	
PTV Navigation SDK	
Service	

Enter your PIN Code:

Bitte geben Sie den PinCode ein

Serial No.: F-
Reference No.: **F5-FA-64-AA**
Pincode **89846605**

Der Pincode ist korrekt.

1 2 3 4 5 6
7 8 9 0

Abbrechen

Ok

If the PIN is correct the you will see this picture:

PTV TruckNavigator



The road traffic regulations always have priority over the instructions given by PTV Navigator. Please do not actively use this device whilst driving.

OK



CARTFT.COM

Shop for mobile
PC- and GPS-Solutions

Power Up Your Car

Now in Navigator-main menu, you choose „Settings“, because you have to configure the GPS receiver:

PTV Navigator 7



Navigation



Route Planner




Map



Settings



Taskbar

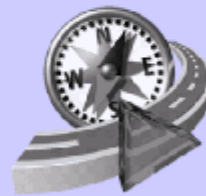

**Continue
navigation**

Exit

Klick on „Data link“:

Select an Option



Speed warning



Version



System



TMC settings



Data link



**Day/Night auto
setting**



Back



CARTFT.COM

Shop for mobile
PC- and GPS-Solutions

Power Up Your Car

“Configure GPS”

Select Data Connection



Configure GPS



GPS test



Configure TMC



TMC test

Back

Search

Select your GPS-COM Port


Select COM port



GPS-COM 1



GPS-COM 3

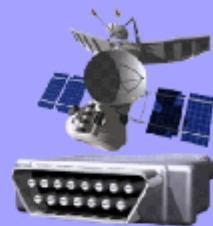

GPS-COM 7

Cancel

OK



CARTFT.COM

Shop for mobile
PC- and GPS-Solutions

Power Up Your Car

Select the Baud Rate

Select Baud Rate



4800 baud



9600 baud



19200 baud



38400 baud



57600 baud




115200 baud

Cancel

OK

If you dont know which port to select, then just run an "Automatic Search" (Search).

Select Data Connection

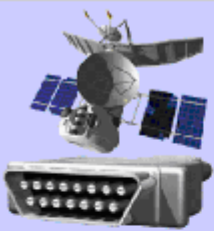

Configure GPS



GPS test



Configure TMC



TMC test

Back

Search

Automatic Search

GPS: COM 6, 38400 baud
TMC: COM 6

OK

Choose "Profile":

Select an Option



Volume



Set Home
Address



Favourites



Special
destinations



Profile




Hazard warning









Back

Use for „pencil“ to create their individual profile.

Vehicle profile

<input checked="" type="checkbox"/> Car	⬆	+
<input checked="" type="checkbox"/> Truck 7.5t	⬆	+
<input checked="" type="checkbox"/> Truck 40t	⬆	
<input checked="" type="checkbox"/> Truck 16t	⬆	+
<input checked="" type="checkbox"/> Truck 12t	⬆	+
	⬇	+
	⬇	+
	⬇	+
	⬇	+
Cancel		OK

Speed profile

 Fast Car	 Standard car	 Fast truck
 Slow truck	 Motorcycle	 Self-learning
Back	Cancel	Next

Additional options



Motorways



Ferries



Toll



turn around



**Hazardous
goods**



**Water-
polluting goods**



Back

Cancel

Next

Hazardous goods-tunnel settings



No restrictions



B

Class B



C

Class C



D

Class D



E

Class E

Back

Cancel

Next



Routing setting

In route calculation roads which are not suitable for trucks (e.g. side roads or cross-town links) can largely be avoided. Please choose one option:

- Not avoid
- Avoid
- More avoid

Back

Cancel

Next

Here can you adjust the corresponding specifications of your vehicle:

Technical data

Height: 4.0 m

Width: 2.6 m



Length: 4.1 m



Weight: 40.0 t

Maximum axle load: 9.0 t

Back

Cancel

Next



Give your Profile a Name and save it:

Enter profile name

Name:

A	B	C	D	E	F	G	H
I	J	K	L	M	N	O	P
Q	R	S	T	U	V	W	X
Y	Z			ABC	123	ÄÁÀ	<
Back		Cancel			Save		

Congratulations and enjoy!